

Quick Start |


1. Turn on

Press the Power button on the side of the control panel.



2. Select a Detect Mode

Select the optimum Detect Mode Search Profile for your detecting location.

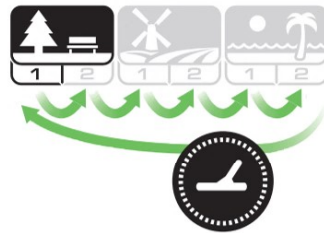

3. Noise Cancel

Select Noise Cancel from the Settings Menu, then press to initiate an Auto Noise Cancel. Hold the coil stationary and away from the ground. This will take approximately 8 seconds to complete.



4. Begin detecting!

Press to return to the detect screen, and begin detecting!



Detect Modes | Each Detect Mode has two adjustable Search Profiles with unique default settings.



Park

Great for high-trash recreational areas, including most general detecting.

1

General / Coins

2

Fine Jewellery



Field

Ideal for detecting in historical fields for the widest range of target sizes.

1

Coins / Artefacts

2

Fine Coins / Artefacts



Beach

Optimised for all salty conditions – dry sand, wet sand, surf, underwater.

1

Wet / Dry Sand

2

Underwater / Surf

